5. Printed Circuit Board Diagram

5-1 CD

* TOP VIEW

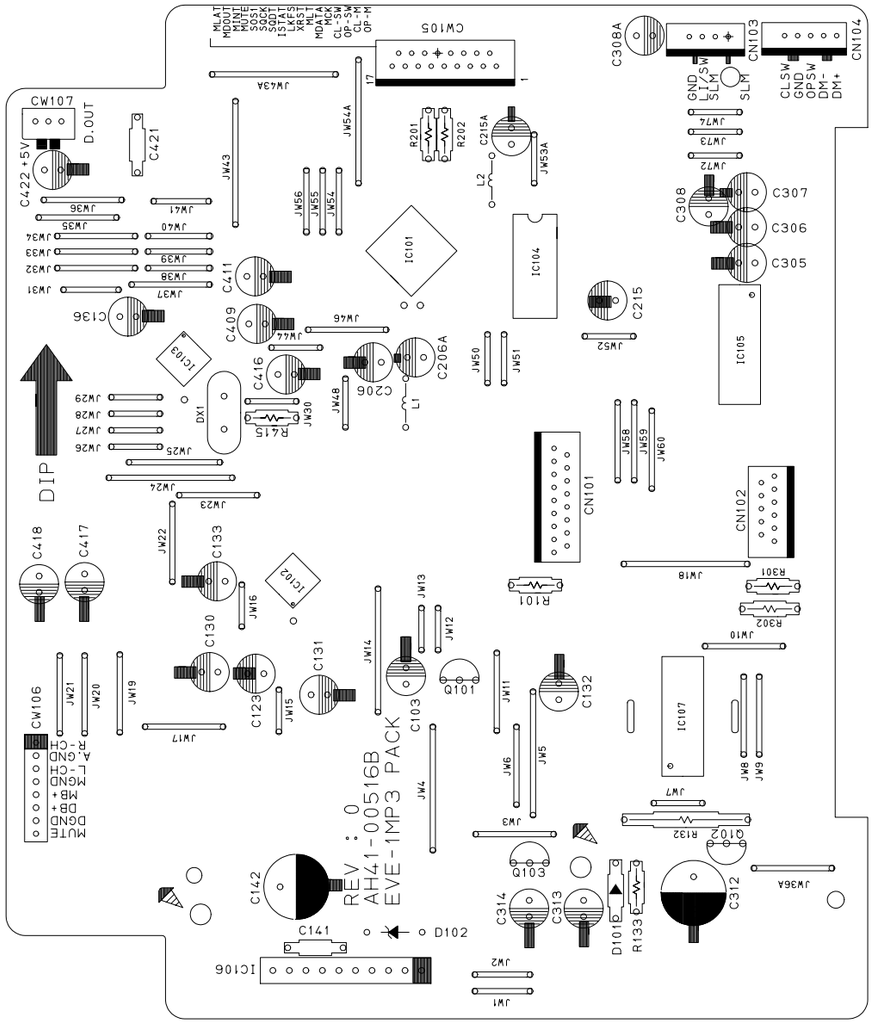

* BOTTOM VIEW

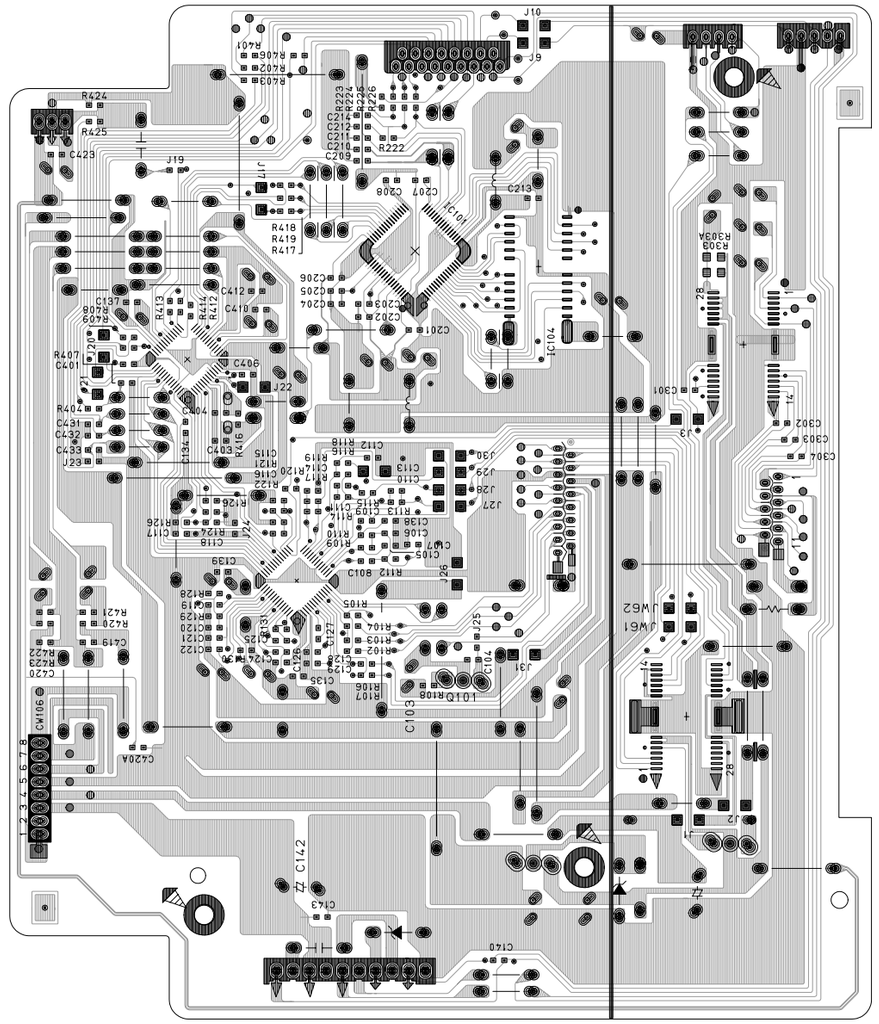

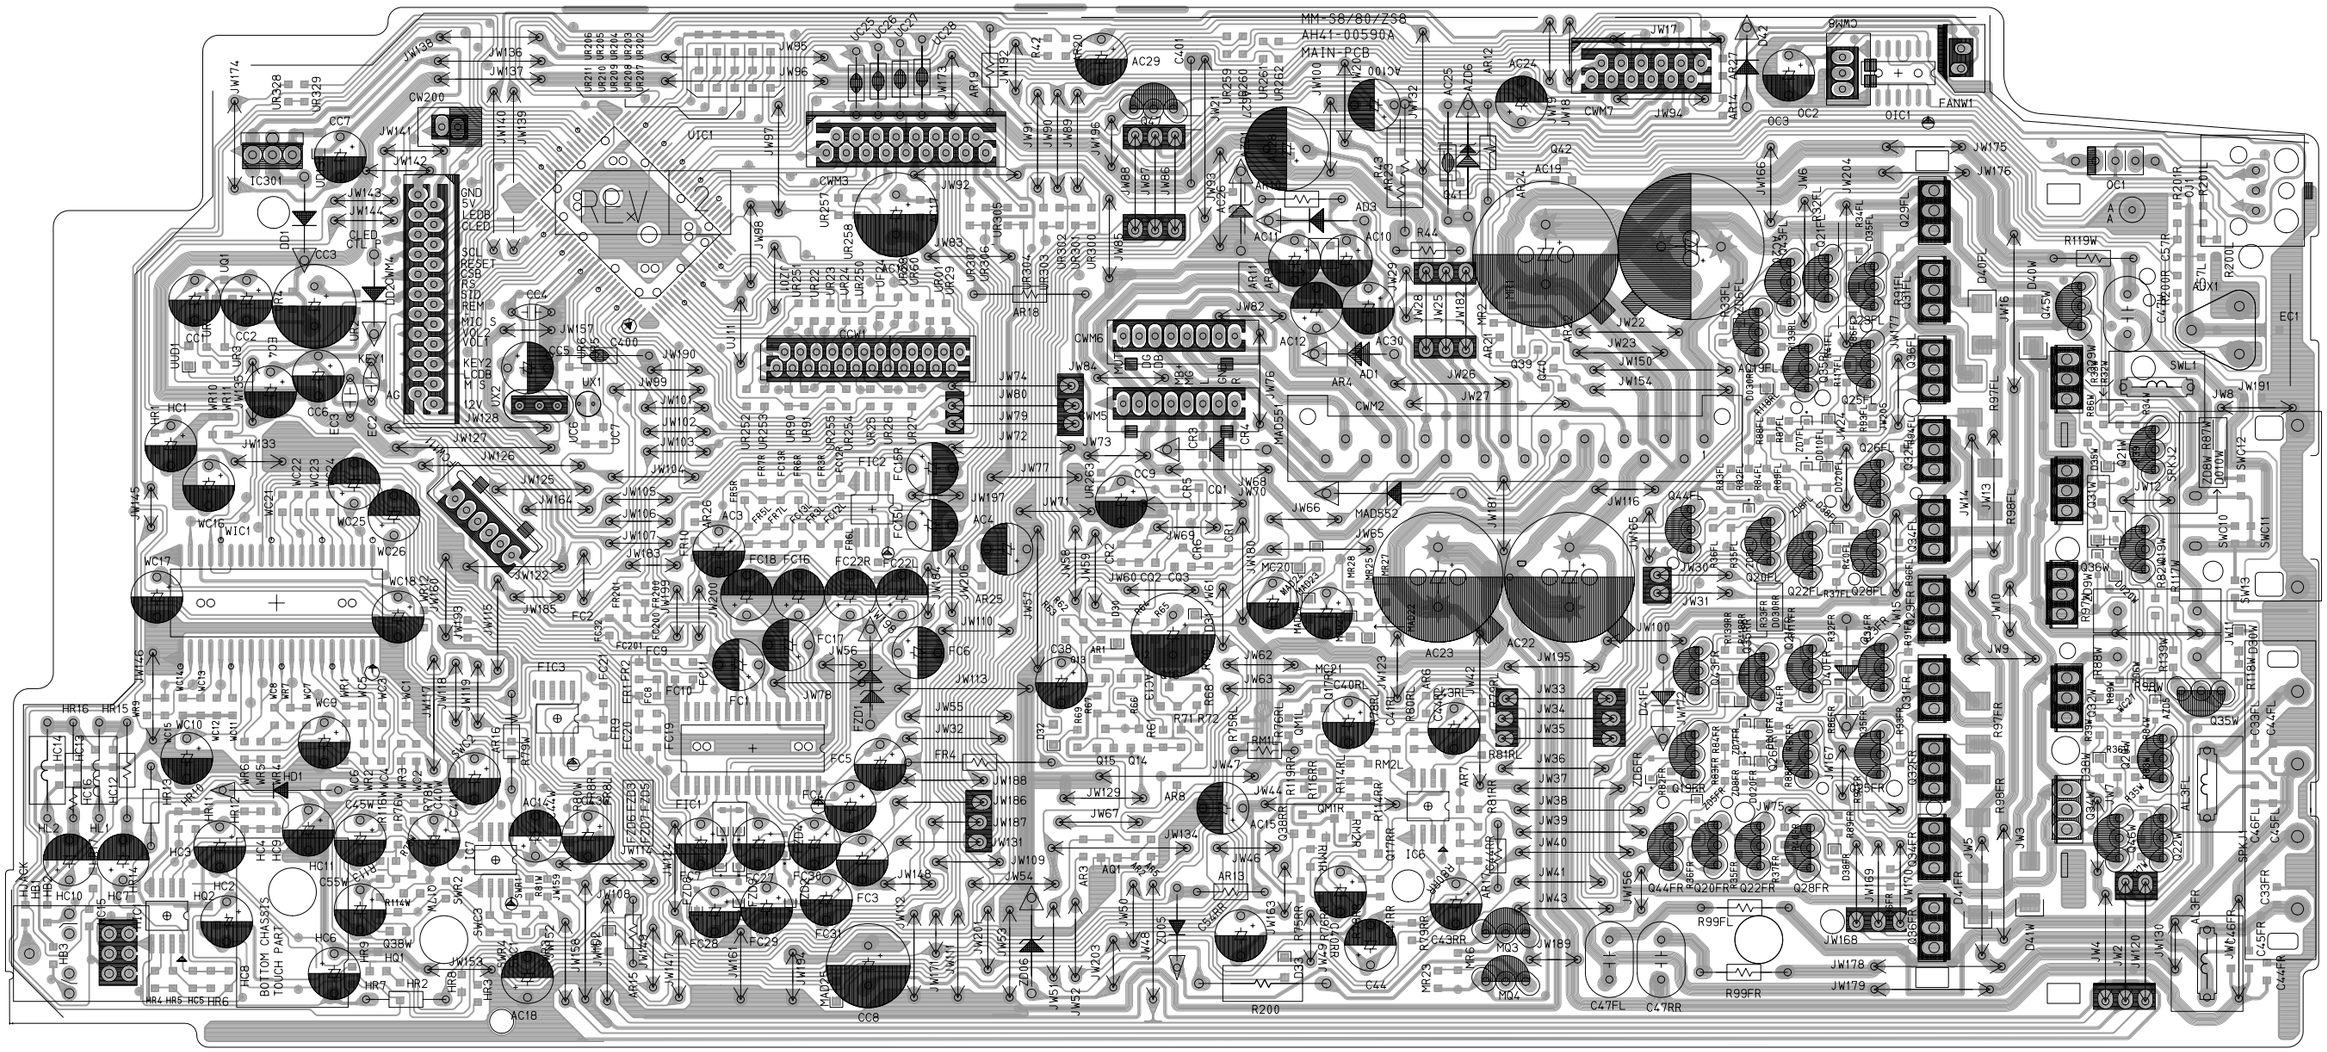
MM-S8780/Z9B
AH41-00590A
MAIN PCB
REV 1.0
BOTTOM CHASSIS
TOUCH PART

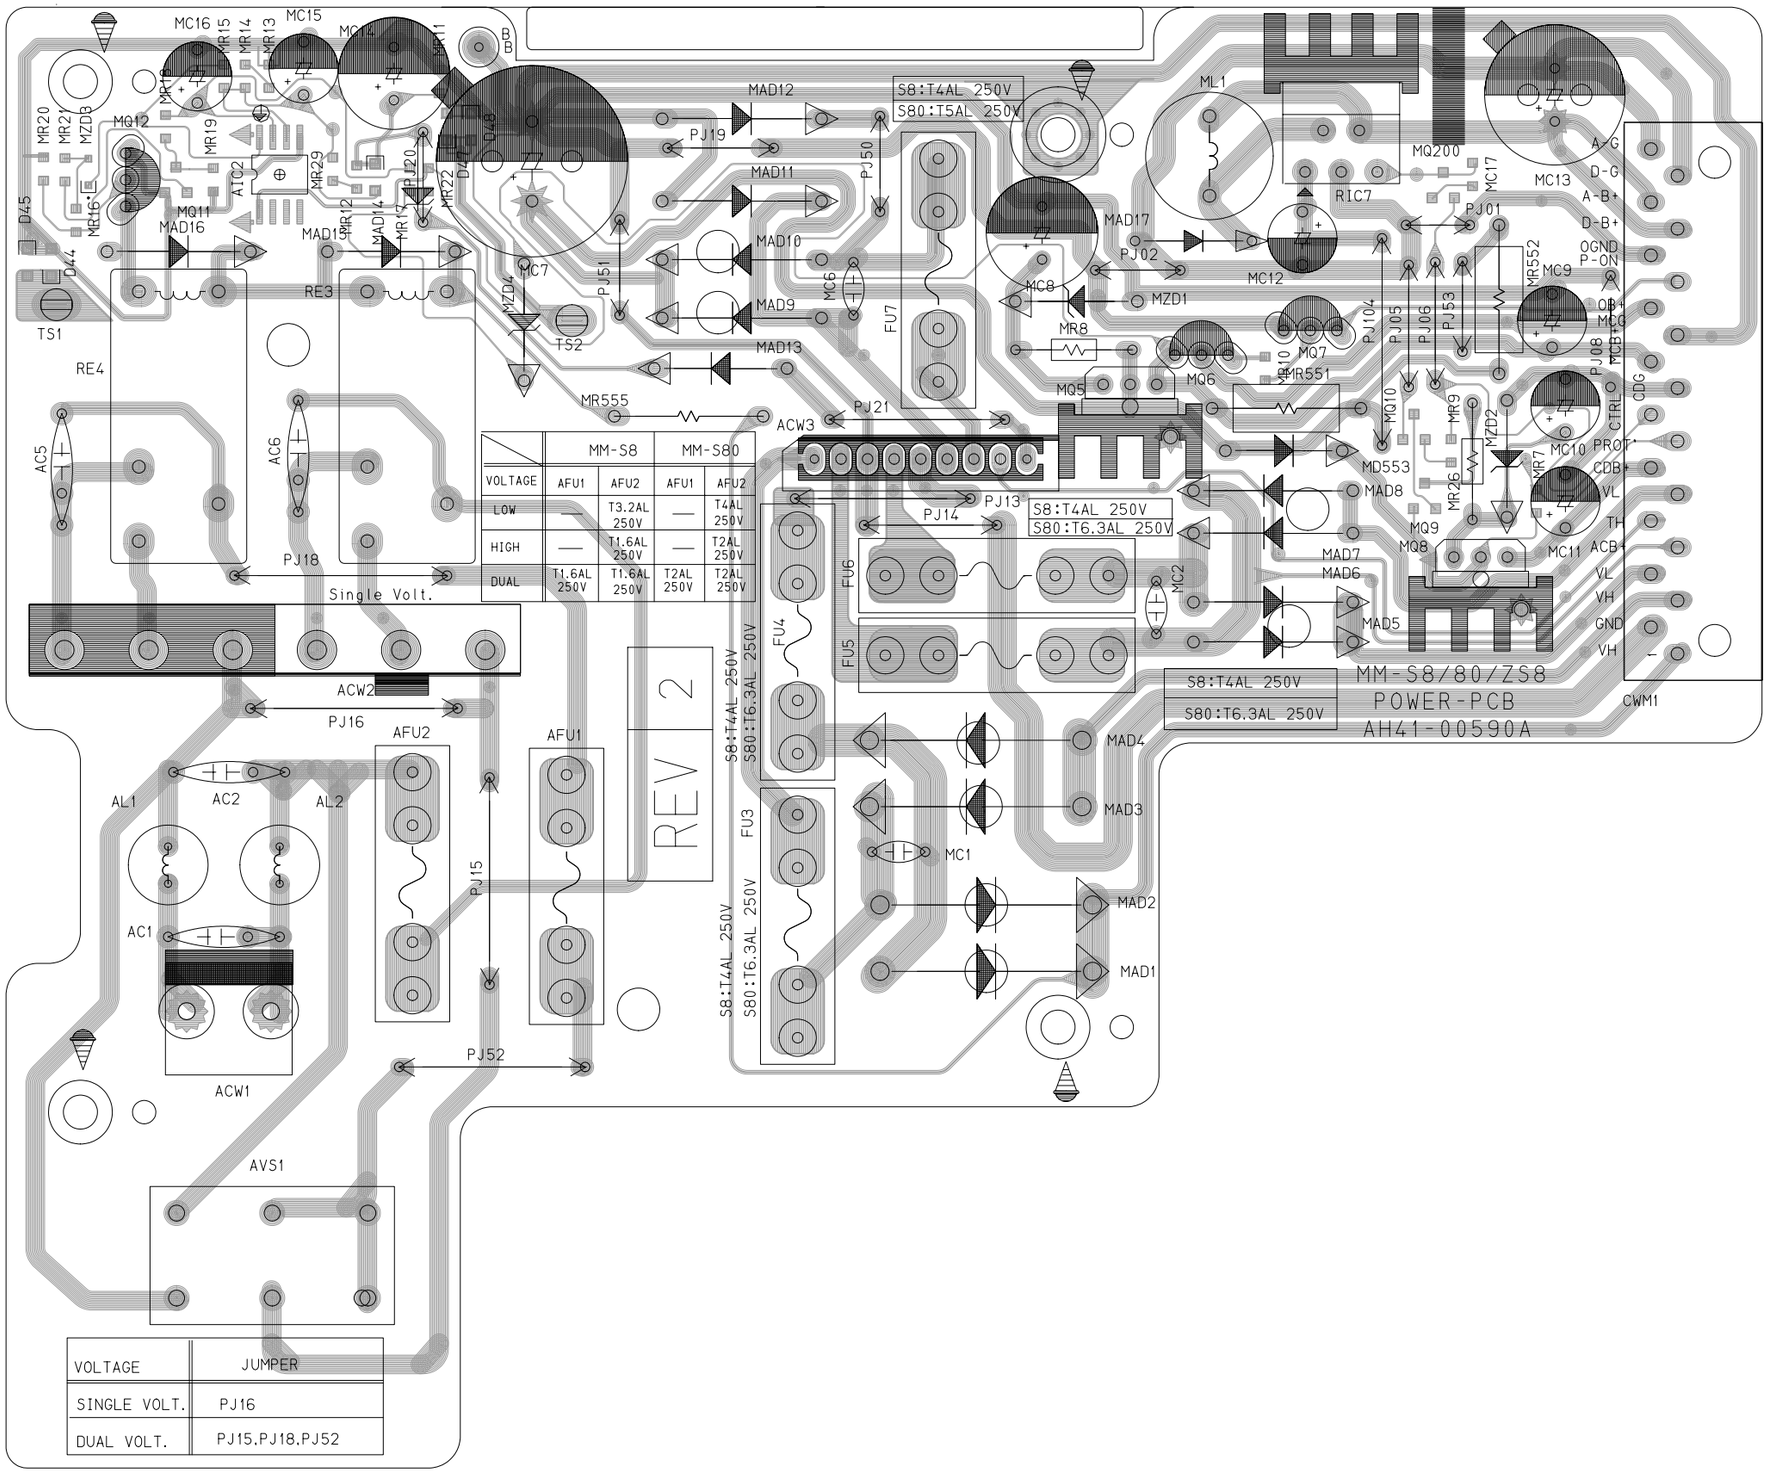
MM-S8/80/ZS8
POWER-PCB
AH41-00590A
REV 2
Single Volt.
S8:T4AL 250V
S80:T5AL 250V
S8:T4AL 250V
S80:T6.3AL 250V
S8:T4AL 250V
S80:T6.3AL 250V
S8:T4AL 250V
S80:T6.3AL 250V
MM-S8
MM-S80
VOLTAGE
AFU1
AFU2
AFU1
AFU2
LOW
—
T3.2AL 250V
—
T4AL 250V
HIGH
—
T1.6AL 250V
—
T2AL 250V
DUAL
T1.6AL 250V
T1.6AL 250V
T2AL 250V
T2AL 250V
VOLTAGE
JUMPER
SINGLE VOLT.
PJ16
DUAL VOLT.
PJ15.PJ18.PJ52
A-G
D-G
A-B+
D-B+
OGND
P-ON
CDG
VL
TH
ACB+
VL
VH
GND
VH
CWM1
MC16
MC15
MC14
MC13
MC12
MC11
MC10
MC9
MC8
MC7
MC6
MC5
MC4
MC3
MC2
MC1
MAD12
MAD11
MAD10
MAD9
MAD13
MAD17
MAD16
MAD14
MAD15
MAD8
MAD7
MAD6
MAD5
MAD4
MAD3
MAD2
MAD1
MQ12
MQ11
MQ10
MQ9
MQ8
MQ7
MQ6
MQ5
MQ200
MR555
MR552
MR551
MR26
MR10
MR9
MR8
MR7
MZD4
MZD2
MZD1
MD553
RIC7
ML1
RE4
RE3
TS1
TS2
AC5
AC6
AC2
AC1
AL1
AL2
ATC2
ACW3
ACW2
ACW1
AVS1
FU7
FU6
FU5
FU4
FU3
PJ19
PJ50
PJ51
PJ21
PJ13
PJ14
PJ16
PJ18
PJ15
PJ52
PJ01
PJ02
PJ104
PJ05
PJ06
PJ53
PJ08
PJ09
PJ10
PROT
CTRL
CDB+
MCB+
MCG
QB+

5-4 FRONT

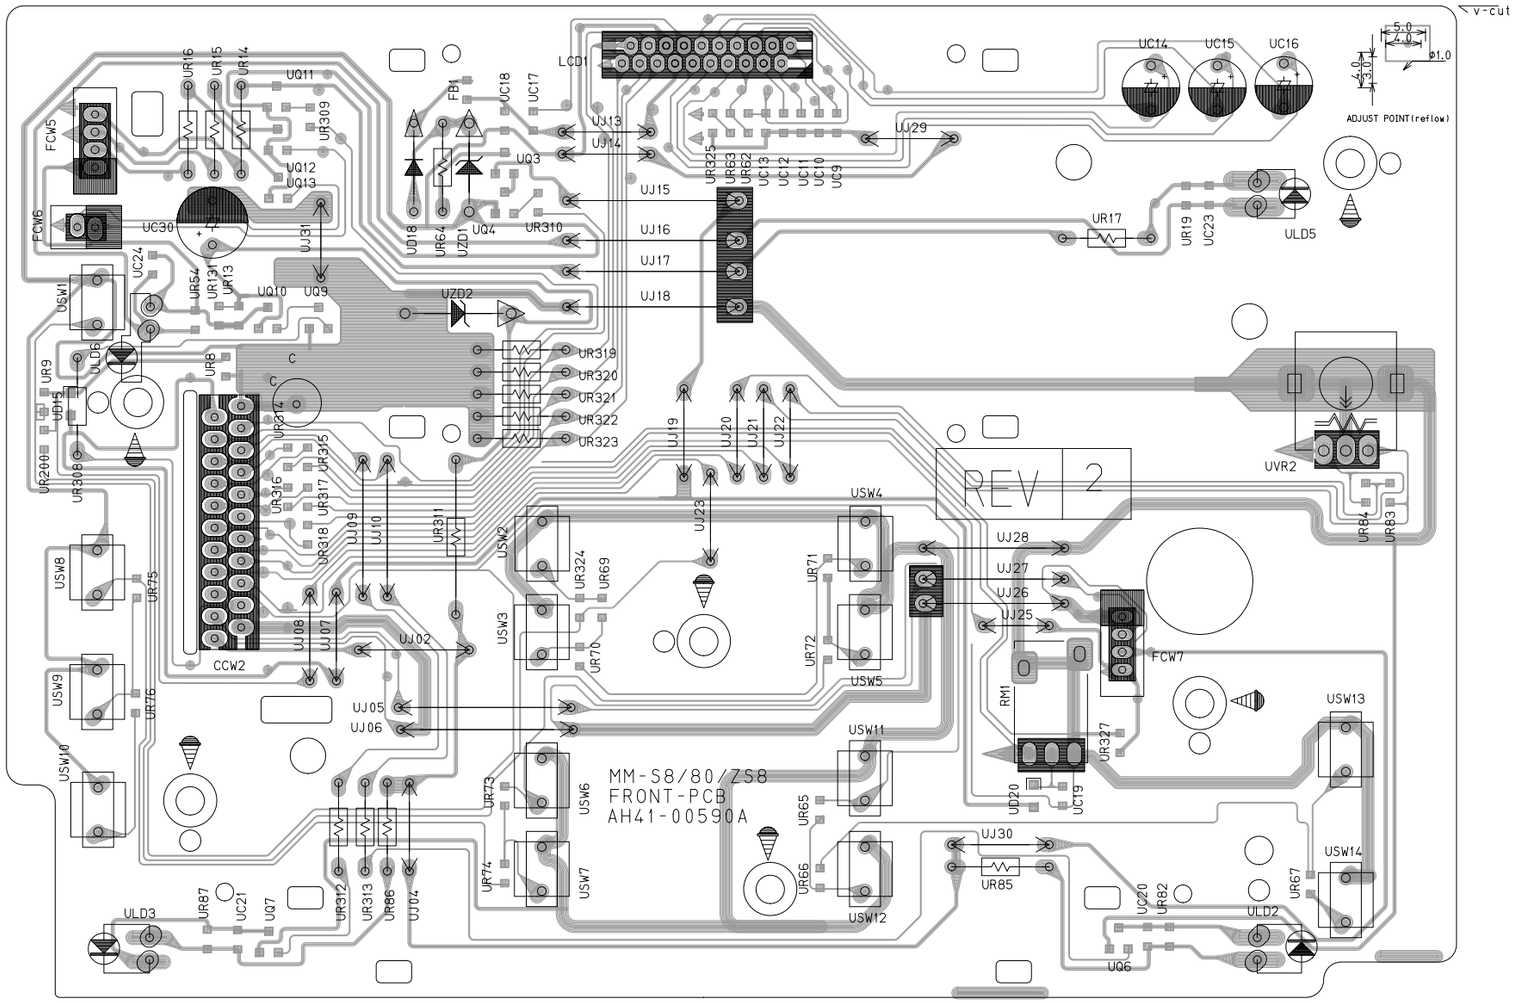
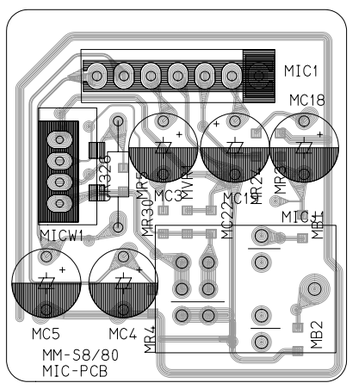
5-5 MIC